



VIKING SECURITY SAFE
BIOMETRIC FINGERPRINT SAFE

User Manual

VS-25BM / VS-35BM / VS-12BM / VS-12BMD
VS-52BM / VS-40BM / VS-82BM / VS-82BMD

Thank you for choosing our safe!
Before operating your new safe, please read
the user manual to ensure maximum performance.

1. OPENING THE SAFE FOR THE FIRST TIME


- Move the plate (Z) (see diagram 2)
- Insert the key into the lock and turn it clockwise to open the door.

NOTE: Please using the key in the direction as shown from Diagram 1 (groove of the key upward)

Do not keep the key in the safe itself!
Diagram 1



Diagram 2

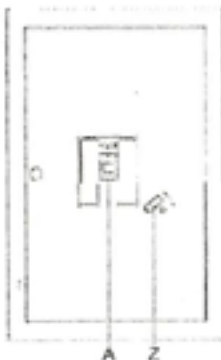

2. INSTALLING THE BATTERIES

The safe requires 4 × size 'AA' (1.5V) batteries. Remove the battery cover (Y)

(see diagram 3) and install the batteries into the compartment. Ensuring the batteries are fitted with the correct corresponding polarity. Close the door by turning the key anti-clockwise and pull out the key.

Use of alkaline batteries is recommend.

3. USING THE SAFE

Opening the safe

- Press the button (A) (see diagram 2), and the red light will be flashing from fingerprint reader.
- Place your finger on the fingerprint reader within 5 seconds. If the input is confirmed, the electronic lock will open automatically. At the same time, pull knob to open the door. If the finger is not confirmed, you will see and hear failure feedback.

NOTE: Any finger will open the safe door until the safe is programmed with new fingerprints (see step 4). It is recommended that fingerprints are programmed into the safe before using it.



VIKING SECURITY SAFE BIOMETRIC FINGERPRINT SAFE

Closing the safe

Close the door: just press the button (A) (see diagram 2), the door will be closed automatically.

4. PROGRAMMING THE FINGERPRINT FOR IDENTIFICATION

First programming

The safe can be opened by any finger until programmed.

- a. With the door open, press the green button (D) (see diagram 3) on the top of the door as shown in diagram 4. The fingerprint reader will be ready with flashing red light.
- b. Place your finger on fingerprint reader within 5 seconds. When panel display "OK", your fingerprint has been successfully recorded, or the finger reader is still on with red light, and you need to put your finger on the reader once more.

Next programming

The safe can record 100 different fingerprints. After first programming, you can program other fingerprints.

- a. With the door open, press the green button (D) (see diagram 3) on the top of the door.
- b. The fingerprint reader will be ready with flashing red light.
- c. The red light from fingerprint reader is keeping flashing and place other finger you need to program. If panel shows "OK", your other fingerprint has been successfully recorded.

NOTE: If 100 fingerprints have been programmed, we are not able to program any more fingerprint.

Diagram 3


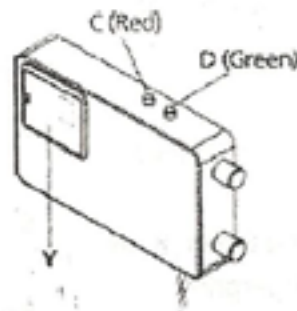


Diagram 4

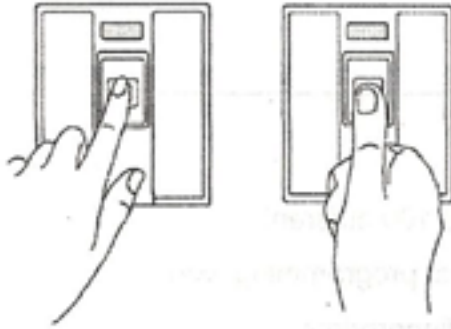

IMPORTANT:

To enhance the fingerprint identification rate, we recommend the same finger is programmed 3 times .

We also suggest two fingers for each hand are programmed.

To avoid fingerprint read failure, we recommend cleaning fingers before placing on the reader. Keep the reader clean and free from grease and moisture.

Always keep finger steady and fully touch the fingerprint reader when recording or reading fingerprints.

Little finger is not recommended for fingerprint identification.

Avoid ultra strong light on the top of fingerprint reader.

6. DELETING THE FINGER RECORD

Press the red button (C) three times. If the panel shows "OK", all the fingerprint

records have been deleted successfully.

Now the system is returned to its original state and any finger can open the safe.

IMPORTANT: Please keep the door open (bolts unlocked), then can delete the fingerprint record.

6. REPLACING THE BATTERIES

The safe requires 4 X size 'AA' (1.5V/LR6) batteries.

Open the safe, remove the battery cover (Y) (see diagram 3), and replace the old batteries.

NOTE: If the batteries are low, you will hear the extra beeper when using the safe under the correct way.

7. OVERRIDE INSTRUCTION TO OPEN THE SAFE

For your convenience, we have engineered a manual override system for your safe. If there is any emergency, move the plate (Z) as shown on diagram 2, insert the key and turn clockwise. This will manually open your safe.

CAUTION: Do not keep the keys in the safe.

8. CARE AND MAINTENANCE

Keep the safe between 0°C to 50°C ambient temperatures. Avoid using in damp conditions.



VIKING SECURITY SAFE